



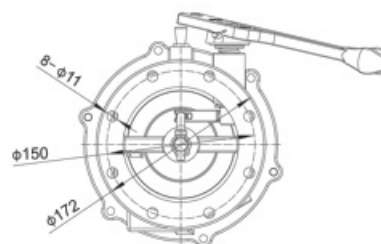


API Valve (Anti-storage Liquid) - Installed at the bottom of the tank, with quick coupler, quickly unload oil, prevent liquid storage inside the valve, is an important part of the bottom unloading, upstream connection to the bottom discharge.

Fitting Details

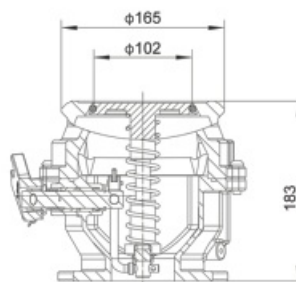

Part No.: 514C41
 Norminal Diameter: 100MM
 Connection: 8 × φ 11 × PCD150
 Nominal Pressure: 6Bar
 Design Temperature: -40°C ~ +120°C
 Contact Part: CF8
 Seal: FEP+ VITON

Part Drawing

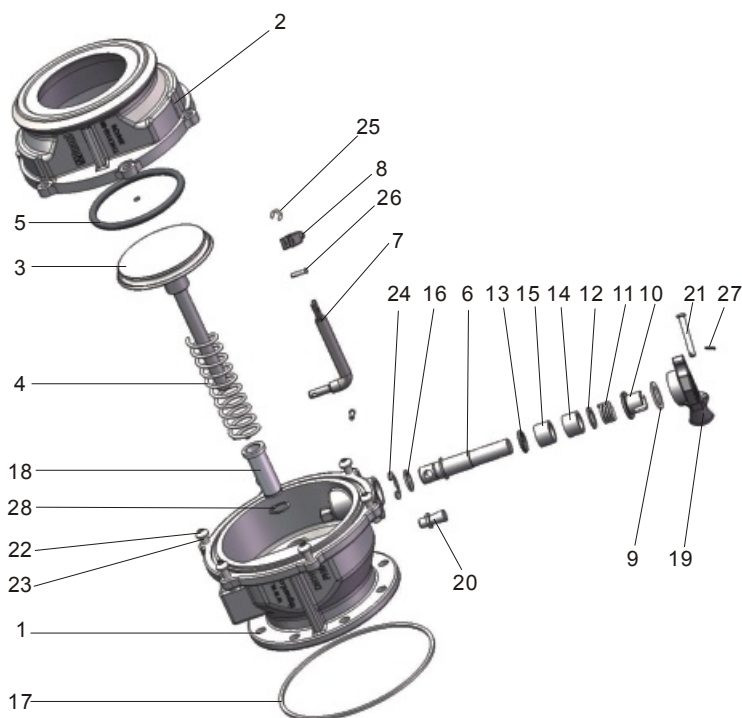

Item	Part No.	Description
1	514C41-01	Body
2	514C41-02	Adaptor
3	514C41-03	Closure Plate
4	514C41-04	SPring
5	8536002093.5*7	O-Ring
6	514C41-05	Spindle
7	514C41-06	Linkage Lever
8	514C41-07	Follower Lever
9	514C41-08	Handle Washer
10	514C41-09	Handle Bottom Cover
11	514C41-10	Spindle Spring
12	514C41-11	Spindle Washer
13	8532000017*3.55	O-Ring
14	514C41-12	Bearing
15	514C41-13	Padding
16	514C41-14	PTFE gasket
17	514C41-15	Main Washer
18	514C41-16	Disc Sleeve
19	514C41-17	Handle
20	514C41-18	Handle Gear Lever
21	859864006*45	Hinge Pin
22	85988500M8*30	Capscrew
23	G859811008	Snap Ring
24	8598190015	Split Washer
25	8598190006	Split Washer
26	859864004*16	Hinge Pin
27	859860001.6*12	Split Pin
28	8598120018	Circlip for Shaft